


Solutions


MS-HD90-3U

USB2.0 HD Camera

AI Tracking Operation Guide

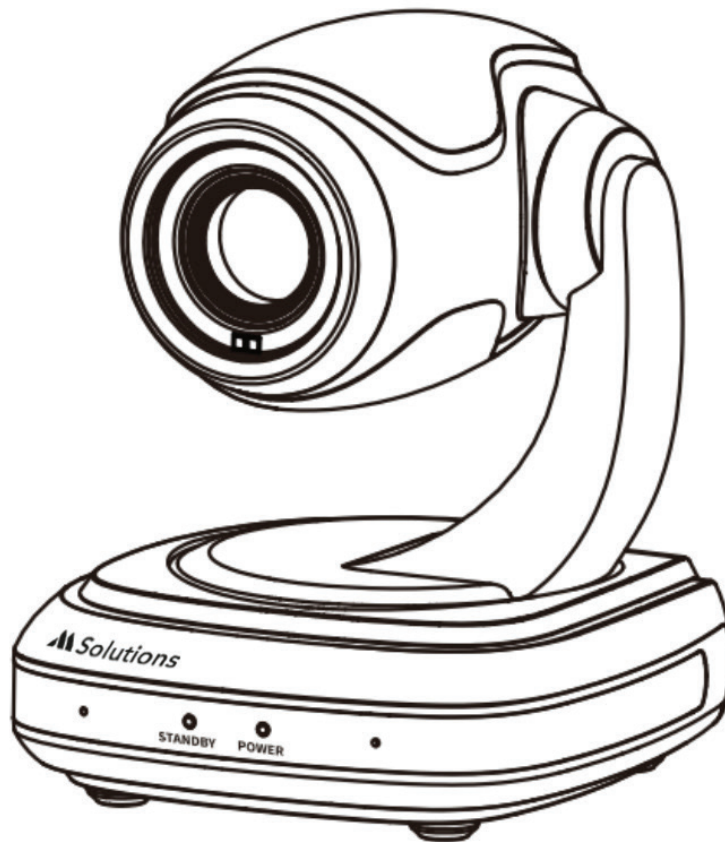

AI Tracking Operation Guide

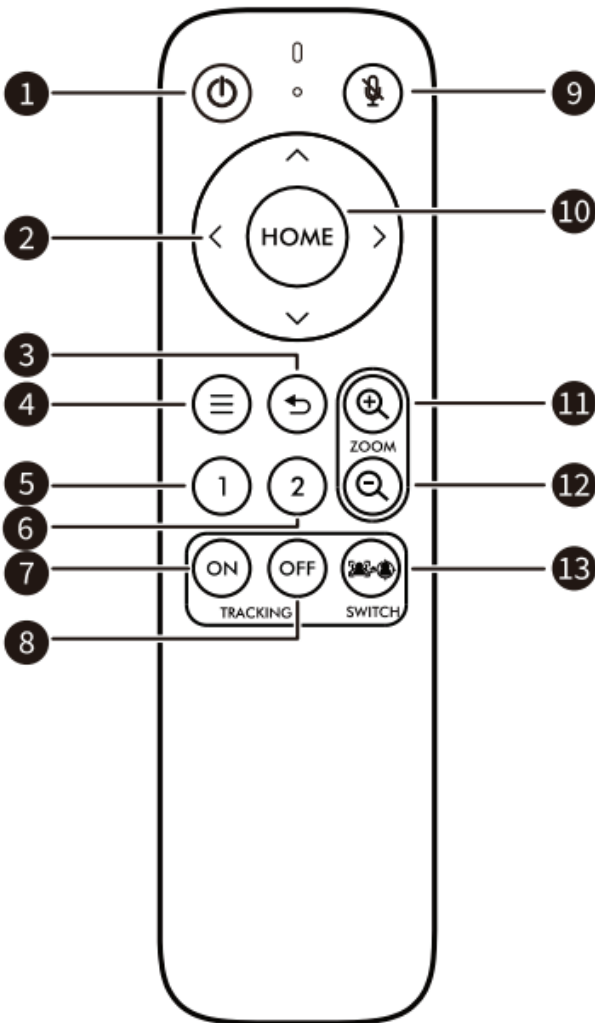

STEP 1: Connect the MS-HD90-3U camera to the display screen using a USB cable to power it on and start using it.

STEP 2: Use the MS-HD90-3U's infrared remote control provided with the camera. Press the button labeled "13" (SWITCH) once to activate the "AI Tracking" function.

STEP 3: Based on the captured image, the camera will automatically track and capture the conference participants positioned in the center of the frame. The camera will follow their movements.

STEP 4: To deactivate the "AI Tracking" function, press the button labeled "8" (OFF) once on the remote control.